
#### **GENERAL INFORMATION**

- · The telephone is designed for indoor use only. Do not install the telephone in areas where there is the risk of an explosion, excessive exposure to smoke, dust, vibrations, chemicals, moisture and heat.
- · Do not use your telephone during an electrical thunderstorm as it is possible to get an electric shock. Refer to information contained in Telstra White pages directory.
- The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items
- · Setting the receiver volume to maximum may, under some situations cause ear damage. We suggest returning the handset volume control to the 0 position after each call.
- · Do not install in damp locations such as a bathroom or laundry, do not expose the unit to direct sunlight.

#### **CLEANING AND CARE**

The surface of the case can be cleaned with a dry, soft, lintfree cloth. Never use cleaning agents, particularly aggressive solvents. Apart from occasional cleaning of the case, no other care is necessary. The rubber feet of the base station are not resistant to all cleaning agents. The telephone feet do not normally leave any marks on the surface. However, on account of the multitude of varnishes and surface finishes used, surface marks caused by the feet of the unit cannot be ruled out, therefore we can not be held responsible for possible damage to furniture or the like.

# GET TO KNOW YOUR PHONE

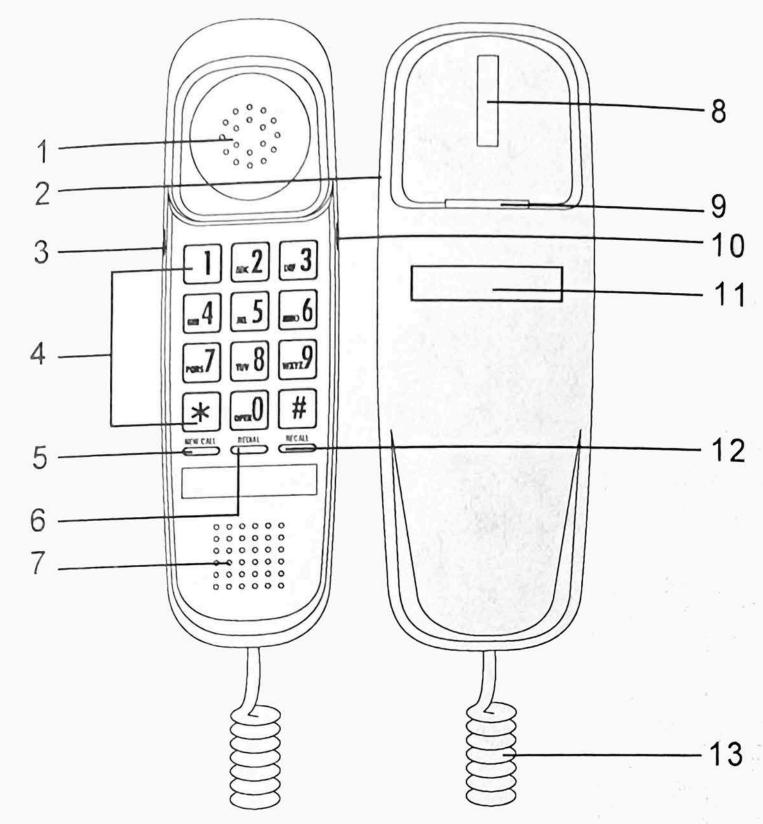

- 1. Receiver
- 2. Ringer On/Off Switch
- 3. Receiver Volume Control
- 4. Universal Compatible Keypad (tone or push button rotary)
- 5. New Call Key
- 6. Redial Key
- 7. Transmitter
- 8. Hook Switch
- 9. Wall Mount Hook
- 10. Switch has no function
- 11. Telephone Number Insert
- 12. Recall Key
- 13. Coil Cord



# № N3674

The A-Tick symbol indicates that this product complies with all current Australian ACMA standards.


# INSTALLATION


## Coil Cord Connection

Insert coil cord into modular jack located on side of housing. Connect the other end into the modular jack located on the handset (see Diagram B).

### **Line Cord Connection**


With a modular telephone system, connect the long telephone line cord to the modular jack located on the bottom of the base. Insert the other end of cord into a modular wall jack. Make sure all plugs snap firmly in place (see Diagram C).

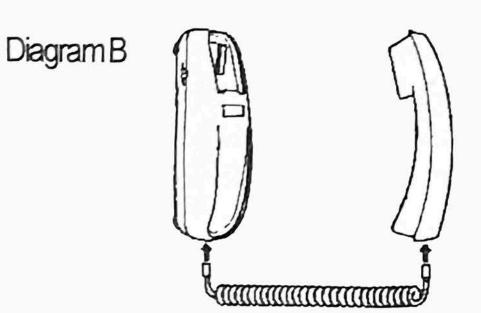

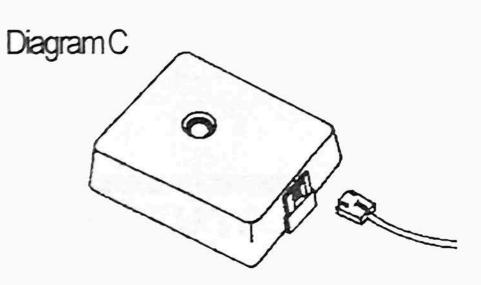

#### Wall Mount

Your telephone is also designed to mount on a wall surface over a modular wall jack. Connect the short telephone line cord to the Diagram E modular jack located on the bottom of base. Insert the other modular plug into the wall jack, making sure it snaps firmly in place. Position the wall mount slots on the bottom of the base over the two studs of the wall plate. Pull down to lock in place (see Diagram E).

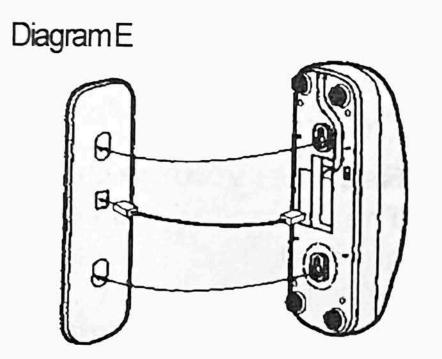

#### **OPERATION**

#### Receiving a Phone Call

When your phone rings, pick up the handset and use like any basic telephone. Hang up the handset to release the telephone line when conversation is completed.

#### Dialing a Call

Pick up phone, wait for a dial tone, press the keys for the number you want.

NOTE: Your telephone features a lighted keypad for dialing in a darkened room.

#### **KEY FEATURES**

#### **Last Number Redial**

Your telephone remembers the last number dialed. If the number you dial is busy or not being answered, hang up. To automatically redial the last number, press the REDIAL button.

NOTE: You can redial the same number as many times as needed. However, once you dial another number, the previous number is erased.

#### Ringer On/Off


Your telephone features a harmonic tone ringer. When you don't want to disturbed, slide the switch to the "OFF" position. Now you can still make outgoing calls without being disturbed by incoming calls.

#### Receiver Volume Control

The Receiver Volume Control is located on the side of your handset. This enables you to adjust the receiver volume on your telephone handset from normal to high for a more comfortable listening level.

#### HEARING AID COMPATIBILITY

Your telephone is compatible with inductively coupled hearing aids.

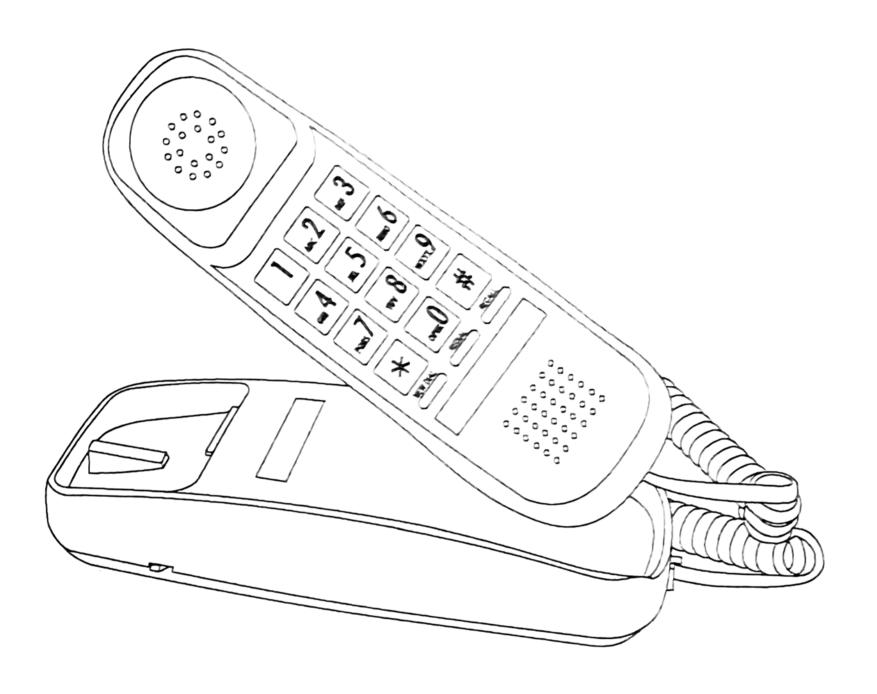

Thank you for purchasing the telephone Model TELE:3021. You've selected a telephone manufactured to exacting performance and durability specifications.

Please read this owner's manual before connecting your new telephone, and retain for future reference.

Before setting up the unit, carefully read through this manual to familiarize yourself with the features and design layout. Then follow the easy step-by-step instructions to install and operate.

4LME79YY